


1.6 Getting started with AdOculus

Please start AdOculus...


...the following screenshot shows the AdOculus startup screen:

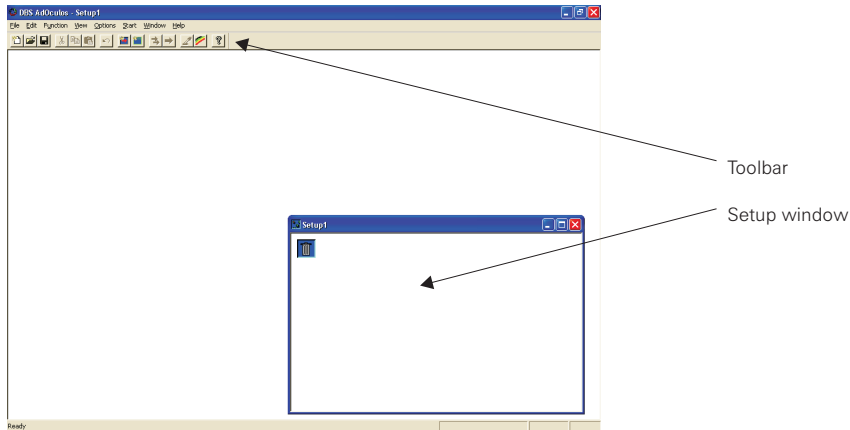

Create a new image window...



...by selecting the "New Picture" icon in the toolbar.

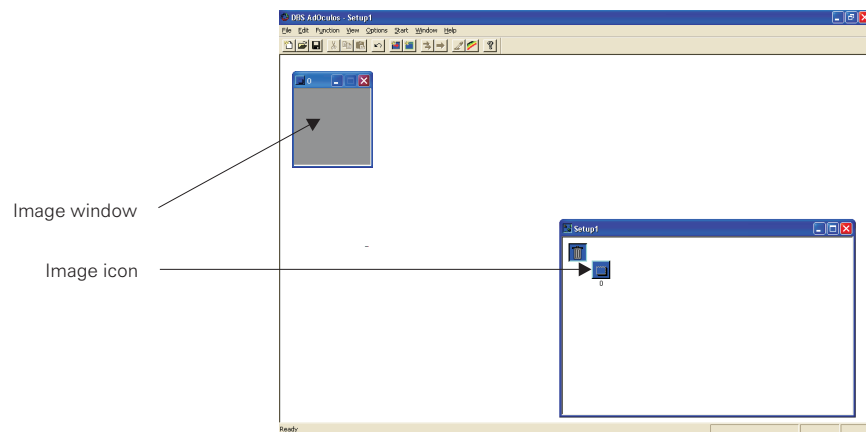


1 Introduction - 1.6 Getting started with AdOculus

Now double click the image window...



...and select the image file Pliers.128.

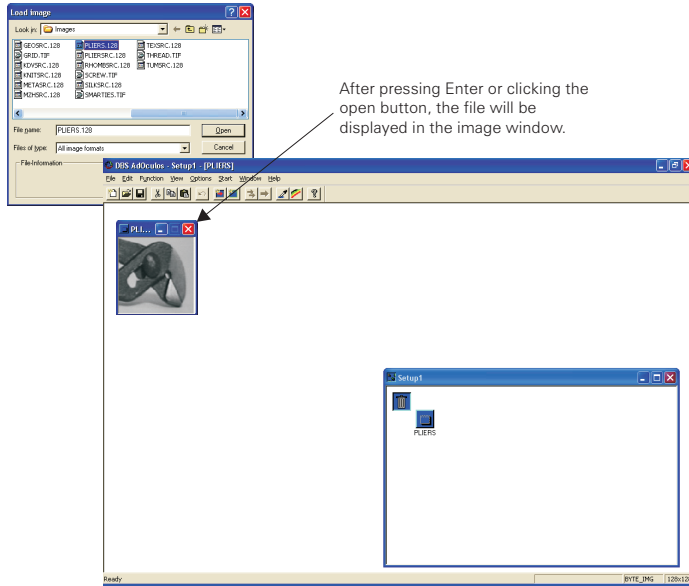


Please now open another image window...


...in the way described earlier.




Your desktop will now display a second image window.

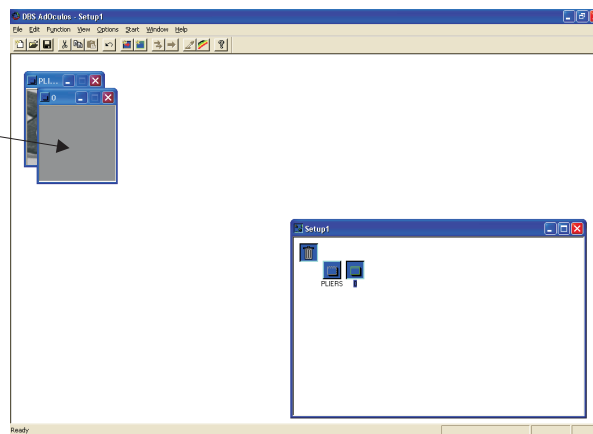


Create a new function...

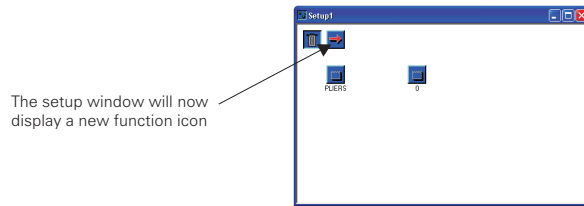


Double click the function icon...

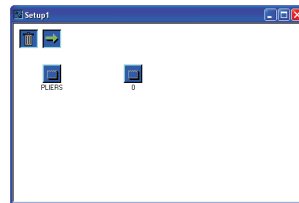

...to open a pop-up window where you can choose the desired function.

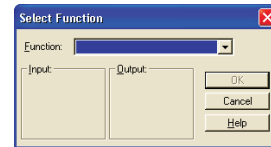


Please choose the function "Median Operator"...

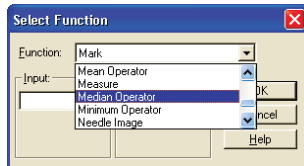


...by scrolling with the vertical scrollbar to the desired position.

Select the image windows...

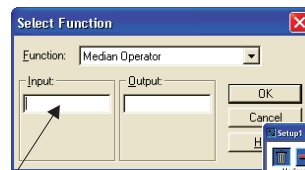


...which are associated with the input and the output image.

1. Click into the "Input" textfield
2. Select the image icon "Pliers"
3. Repeat the procedure 1 & 2 with the "Output" textfield and the image icon "0".

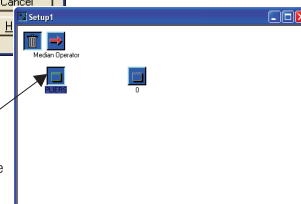


1 Introduction - 1.6 Getting started with AdOculus

Either press "Enter" or click OK to confirm.

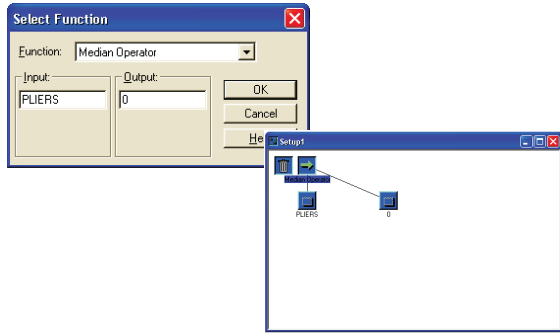

The image icons are automatically connected via lines.

You may rearrange the image icons...

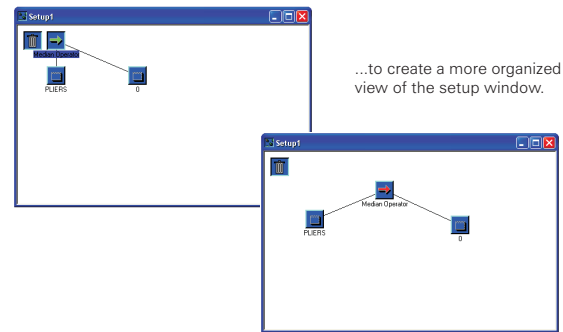


...to create a more organized view of the setup window.

Start the function chain...



...by selecting the "Start all functions" icon in the toolbar.

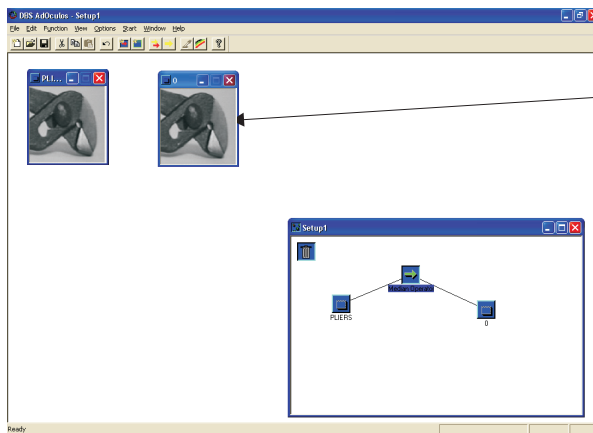

The symbol window "0" will now show the resulting image of the selected function chain